

Directions for Operating the MARKWELL "RX45" FASTENER

To Load

Lift and unhook and remove staple pusher rod at rear end.

Insert staples at rear end of magazine.


Insert pusher rod at rear end of magazine and hook in position.

The Fastener is now ready to operate.

Temporary and Permanent Features

The Markwell "RX" Fastener is equipped with a combination clinching plate which, when pushed toward the rear end of the machine, gives a permanent "Staple" clinch. When pushed toward the front end of the machine the clinching plate gives a "Nu-Pin" clinch which is similar to a new type of pin and can be easily removed without injuring the finger nails but does not have the disadvantage of coming loose or sticking the fingers.

To Clear

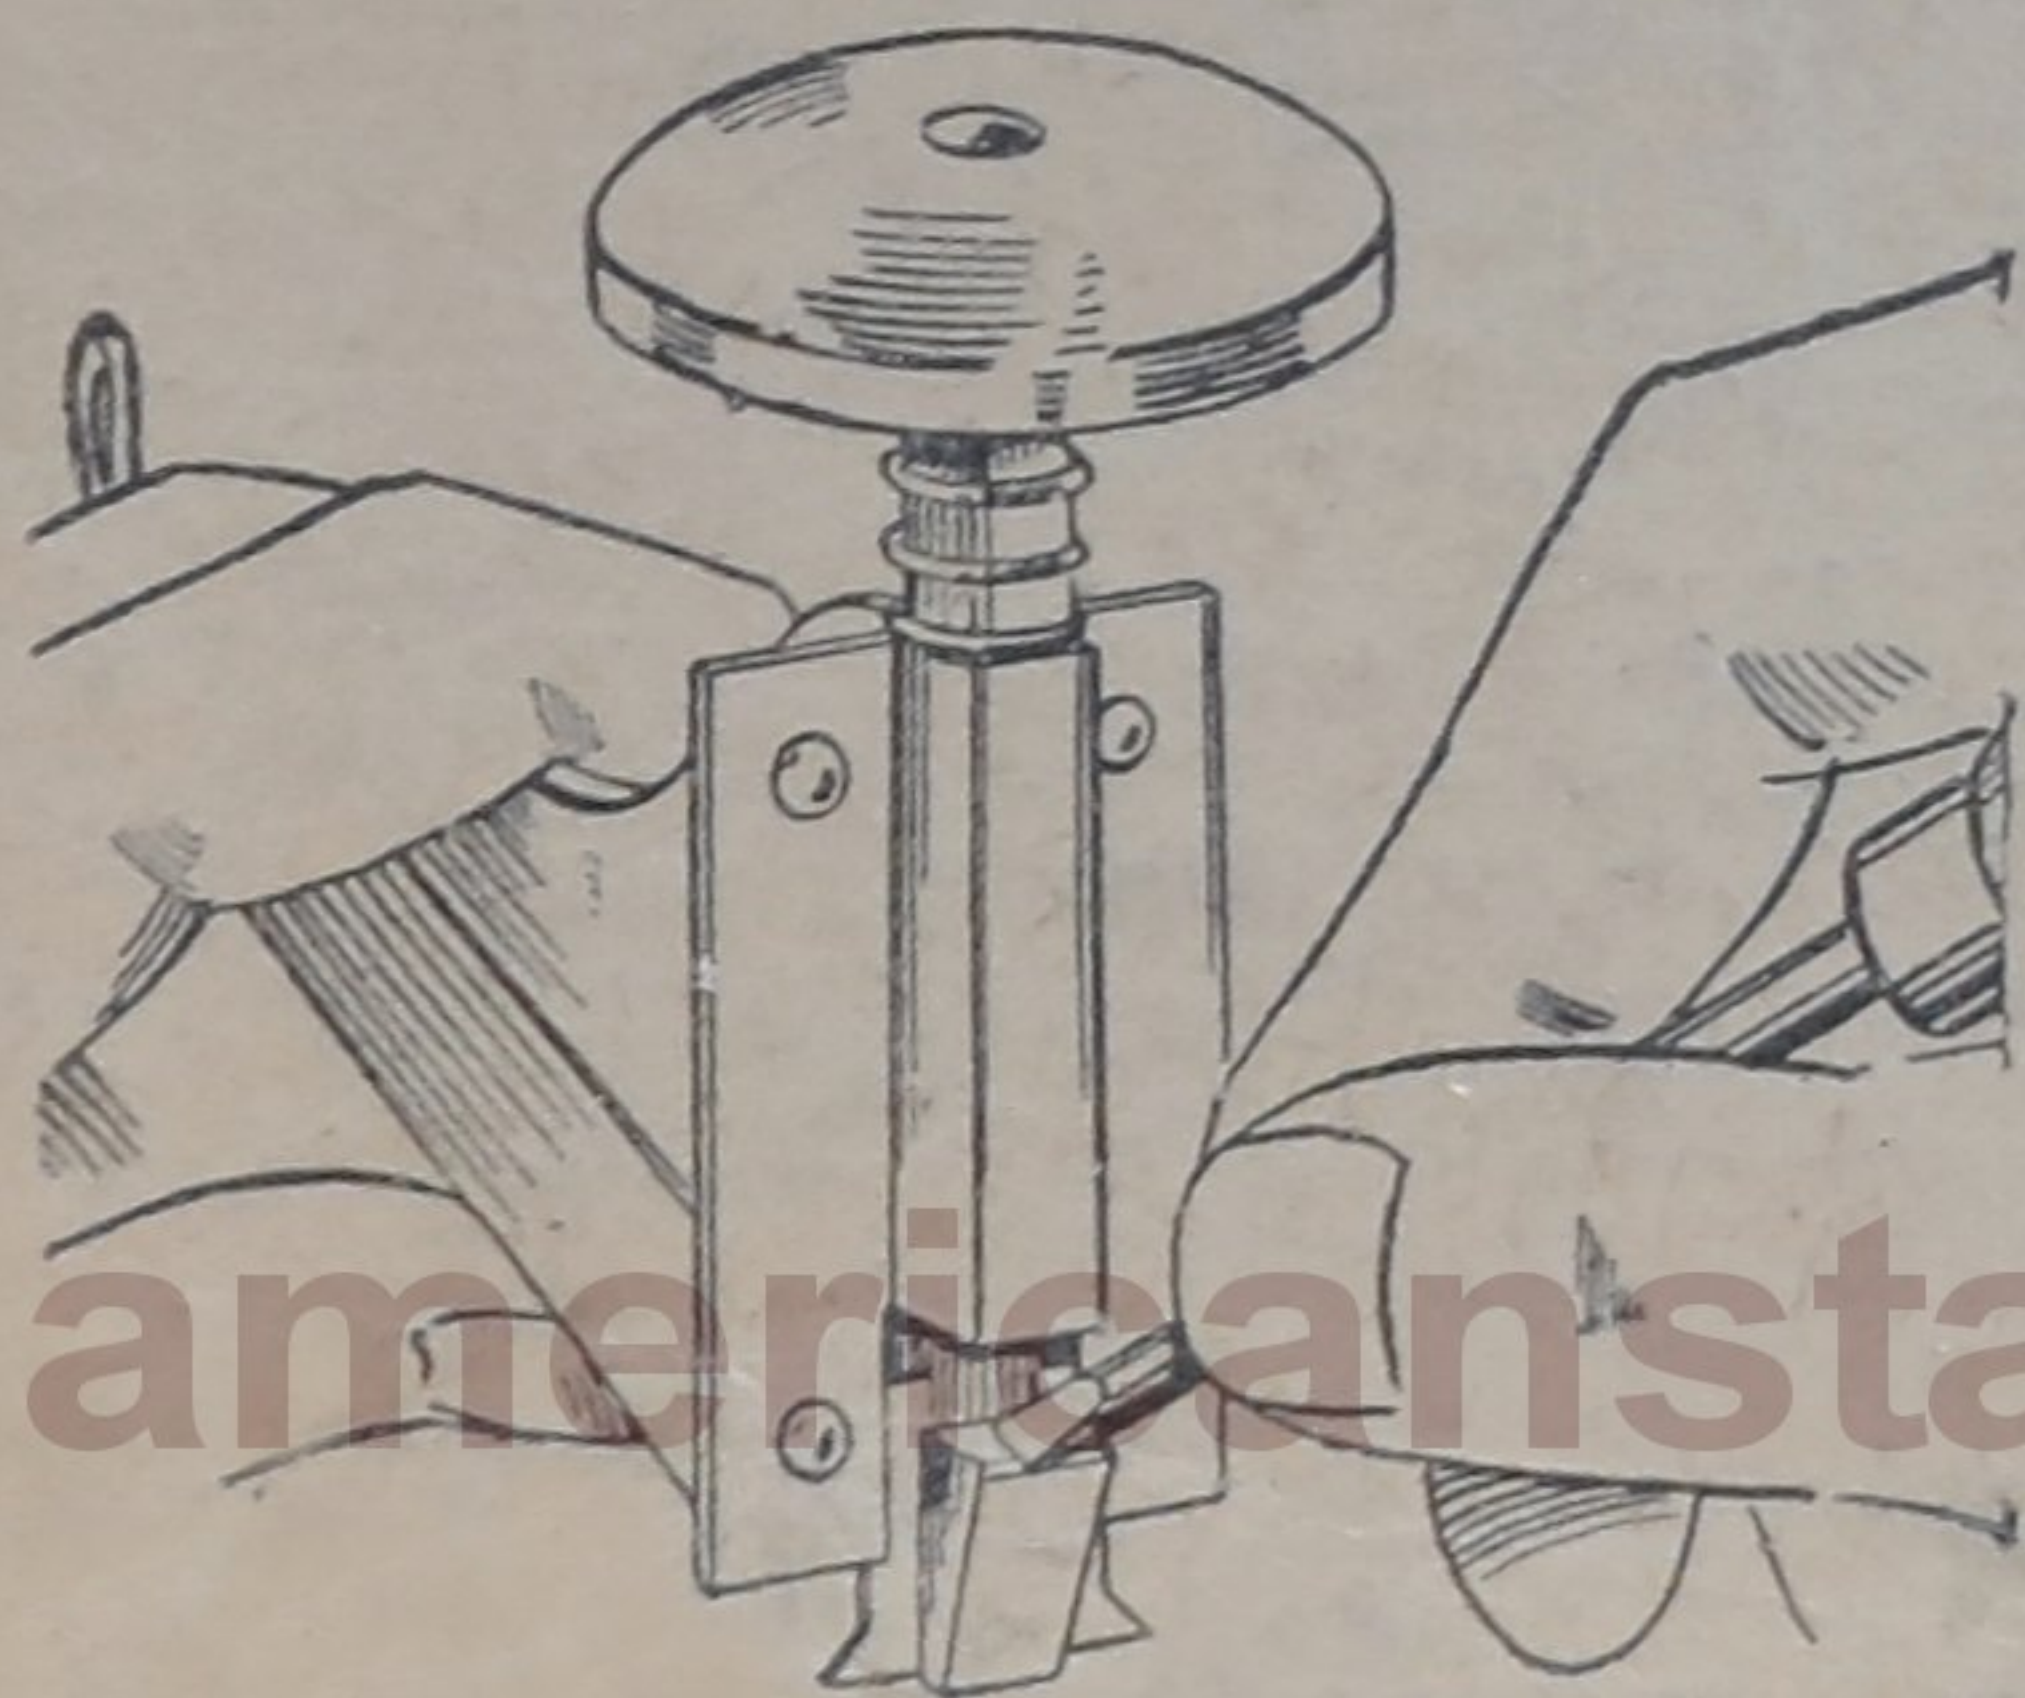

In the event that the machine should appear to be clogged, do not attempt to pound it. Lift, unhook and remove pusher rod at rear end and slide the staples out of the magazine. Swing the base away from the magazine so that it extends out toward the rear. Hold the magazine in one hand and with the other insert a screw driver or similar object in the small slot at the front end of the machine and wedge downward, thereby shifting the removable door until it drops out of its channel. The entire staple drive channel is now exposed and any bent or clogged staples can easily be removed. Insert the door by sliding it back into its guide channel and pushing it firmly in place. (Be careful not to press against the plunger while this is being done.) The jam has been cleared and the machine may be loaded and is again ready for use.